

UFO High Bay

INSTRUCTION MANUAL

- Thank you for purchasing our UFO Highbay. Please read the below articles carefully to see how to use this product safely.
- Warning contents and attention contents related to product safety use, please be sure to follow it.

⚠ Warning

- This UFO High bay within the input voltage range:120-277VAC,50/60Hz.
- If input voltage exceeds this range, it may cause light failure. Please be sure to operate under correct input voltage.
- Ensure ambient operating temperature of -40°F(-40°C) through 122°F(50°C).
- Using this UFO High bay in temperatures outside of this range will reduce the UFO High bay lifespan.
- Make sure to turn off power before starting the installation process.

⚠ Attention

- IP rating: IP65, can work under wet locations.
- Please keep the UFO High bay away from any corrosive substance. When you clean it, please use damp or dry cloth.

Model Number	UHB1210-100W- XXX-X-XXXX(X)	UHB1215-150W- XXX-X-XXXX(X)	UHB1220-200W- XXX-X-XXXX(X)	UHB1224-240W- XXX-X-XXXX(X)
Power	100W	150W	200W	240W
Input Current	0.92A	1.38A	1.83A	2.2A
CCT	XXX="XXXK" can be "35K", "40K", "50K", "57K", "65K"			
Input Voltage	AC120-277V			
Frequency	50/60HZ			
Power(TCP/TP)	60W/80W/100W	60W/100W/150W	100W/150W/200W	150W/200W/240W
Input Current(TCP/TP)	0.55A/0.73A/0.92A	0.55A/0.92A/1.38A	0.92A/1.38A/1.83A	1.38A/1.83A/2.2A
CCT((TCP/TC))	35K-40K-50K			

"XXX" can be any letter or number to represent light-emitting angle;

"X" can be H, L or HY (Y=number) to represent lighting effect (no effect to power);

"XXXX" can be XXXK, TCP, TP or TC. "XXXK" can be, "35K", "40K", "50K", "57K", "65K"


TCP=Adjustable power and CCT, TP=Adjustable power, TC=Adjustable CCT;

"(XX)" can be (MS),(PIR),(BT) to indicate Microwave Sensor, PIR Motion sensor, Motion Sensor with Bluetooth or blank to indicate without Motion Sensor.


Installation Instruction

1. Rings type:


1.Tighten the ring clockwise

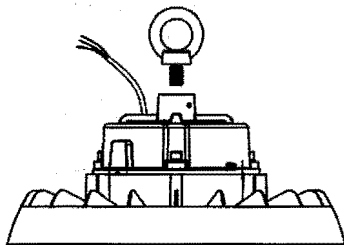

2.Tighten the screw

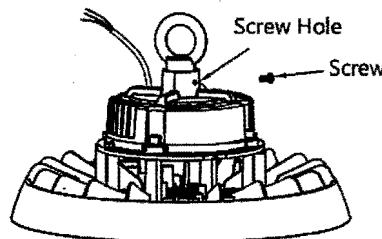


3.Hang the light

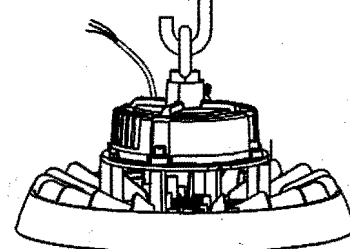


2. Hook type:


1.Tighten the hook clockwise

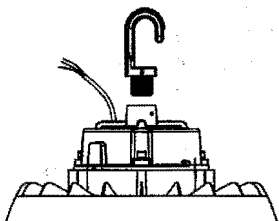


2.Tighten the screw

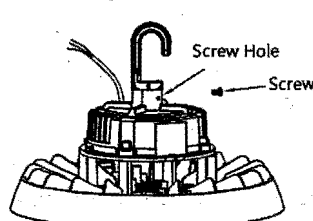

3.Hang the light

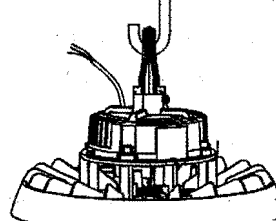


4.Tighten the screw

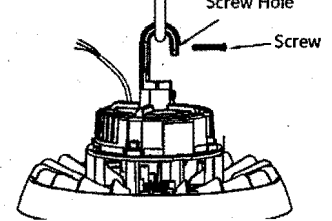

Product Dimension


Unit: mm

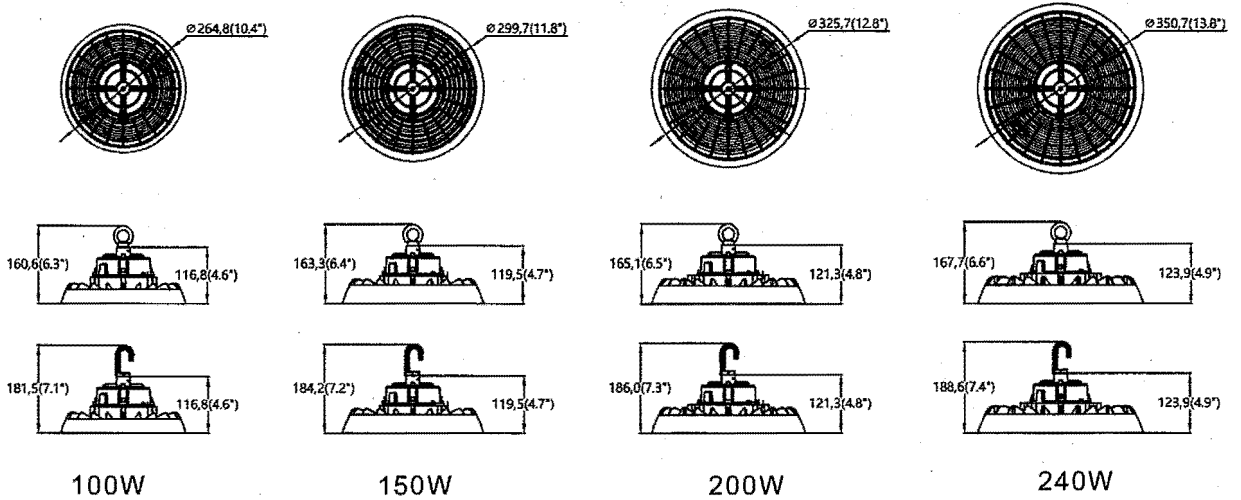


CCT and Watts selected Operation Manual:

A/B/C (Minimum / Middle / Maximum wattage) , WW /NW/CW (CCT:35K/40K/50K)


1.Remove the rubber pad from the driver

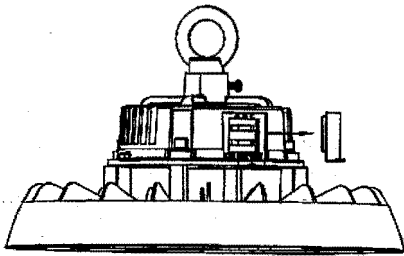

2.Use the slide switch to select wattage and CCT

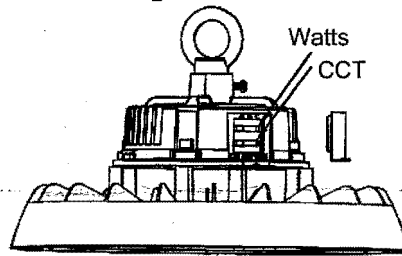


3.Attach the rubber pad to the driver

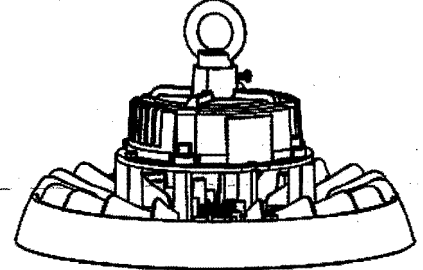


Wiring Connection

Turn off the power,connect AC wire. black wire to L,white wire to N,and green wire to E. Connect wires as below,Purple wire is DIM+, Pink wire is DIM-, Black/White wire is 12V+

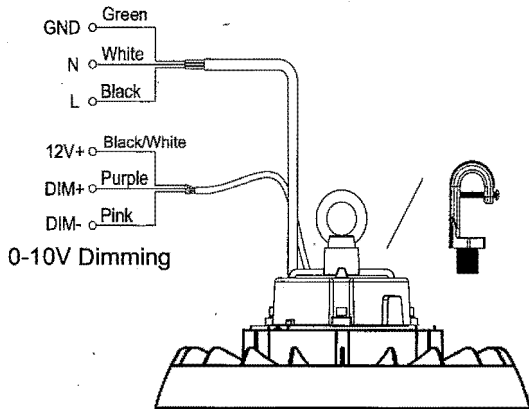


Twist in sensor installation manual


1. Take out cover cap.

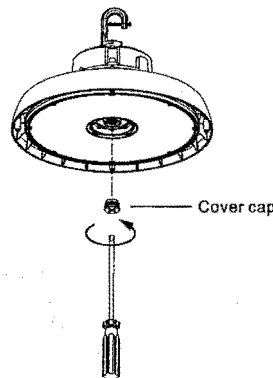


2. Twist in sensor.

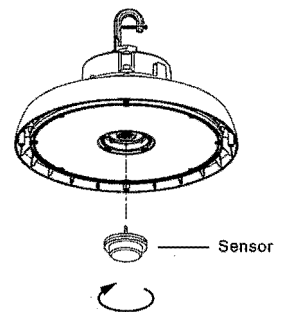

3. Finished installation.

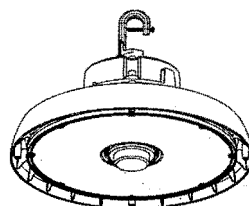

Wiring Diagram

 

Tip: The above content is for reference only, please take the real thing as the criterion

The Installation must be carried out by a qualified electrician.